



Code TH1551

Position	Code	Spare part description
1	BMGTHA.45673	Shell
2	BMGTHC.45673	Lid
3	PPD1179.4540	Fastening lid
4	BMMSAR02.45671	Unlocking handle
5	PPD1178.4540	Lock lid
6	CM-B.1630	Key lock
7	PMD0166.4610	Small lever
8	G6X50.5123	Grub screw
9	PPD1184.4540	Box
10	BPCO2.4540	Central box Lid
11	THA5	Control Unit
12	TRA-G.1025	Transformer
13	MO-D.2640	Spring
14	MICROI-C.1617	Microswitch
15	MICROI.1617	Microswitch
16	30U450A.0727	Capacitor
17	BMCI.4567	Lower calotte
18	PEDS65A.4650	Stator
19	BMCS.45672	Upper calotte
20	PPD1180.4540	Fan
21	PPD1181.4540	Gauge box lid
22	PMD0133R07.4610	Endless screw
23	PMCU3010.4630	Bearing
24	PECR1175.4670	Rotor
25	PPD1182.4540	Housing for microswitch
26	PPD1183.4540	Cap
28	PMCU6.4630	Bearing
33	V6X120.5102	Screw
34	PMD0167.4610	Unlocking pin
35	MO-N.2640	Spring
36	PMCU3.4630	Bearing
37	PMCSE30.4630	Seeger ring
38	PMDRC5.46102	Driven wheel
39	PMD0131A.4610	Shaft
40	PMC128.4630	Cotter
41	PMCS10.4630	Pin
42	PPD0120.4540	Sleeve
43	PMCU10.4630	Bearing
44	GOR-Y.5501	Packing
45	BMFP010A.45673	External flange
46	V5X15-A.5102	Screw
47	PMD0628.4610	Cog wheel
48	R12C.5120	Washer
49	PMD0139.4610	Fixing plate
50	PMD0140.4610	Fastening rag bolt
51	MMCOI.2620	Thimble
52	V4.2X9.5.5101	Screw
53	V2.9X16.5101	Screw
54	PMCAC1.4630	Ring
55	V4X5.5102	Screw
56	V2.9X6.5-A.5101	Screw
57	V3.5X20.5101	Screw
58	EMRO.4870	Label
59	V4.8X16.5101	Screw
60	R04E.5120	Washer
61	V2.9X9.5-A.5101	Screw
62	GOR-L1.5501	Packing
65	CF0193.5320	Wiring
66	CT200.5320	Wiring
67	V4X8.5105	Screw
68	V4.2X9.5B.5101	Screw
69	BPC.4540	Hole lid
70	D6.5102	Nut
71	D12B.5110	Nut
72	D12.5110	Nut
74	G6X14.5123	Grub screw
75	R12.5120	Washer
76	V6.3X25.5101	Screw
77	C3VF.2015	Female connector
78	GOR-M.5501	Packing
79	CGU8B.5310	Protective covering
80	PMD0885.4610	Flask
81	PMD0886.4610	Flask
82	V10X12A.5102	Screw
83	PMD0165.4610	Ferrule
84	GOR-W.5501	Packing
85	PMCS6.4630	Pin

Code TH1561

Position	Code	Spare part description
1	BMGTHA.45673	Shell
2	BMGTHC.45673	Lid
3	PPD1179.4540	Fastening lid
4	BMMSAR02.45671	Unlocking handle
5	PPD1178.4540	Lock lid
6	CM-B.1630	Key lock
7	PMD0166.4610	Small lever
8	G6X50.5123	Grub screw
9	PPD1184.4540	Box
13	MO-D.2640	Spring
14	MICROI-C.1617	Microswitch
15	MICROI.1617	Microswitch
17	BMC1.4567	Lower calotte
18	PEDS652A.4650	Stator
19	BMCS.45672	Upper calotte
20	PPD1180.4540	Fan
21	PPD1181.4540	Gauge box lid
22	PMD0133R07.4610	Endless screw
23	PMCU3010.4630	Bearing
24	PECR1175.4670	Rotor
25	PPD1182.4540	Housing for microswitch
26	PPD1183.4540	Cap
27	M12V.1850	Junction-box
28	PMCU6.4630	Bearing
29	MMCP.2620	Thimble
30	MMCT.2620	Thimble
33	V6X120.5102	Screw
34	PMD0167.4610	Unlocking pin
35	MO-N.2640	Spring
36	PMCU3.4630	Bearing
37	PMCSE30.4630	Seeger ring
38	PMDRC5.46102	Driven wheel
39	PMD0131A.4610	Shaft
40	PMC128.4630	Cotter
41	PMCS10.4630	Pin
42	PPD0120.4540	Sleeve
43	PMCU10.4630	Bearing
44	GOR-Y.5501	Packing
45	BMFPO10A.45673	External flange
46	V5X15-A.5102	Screw
47	PMD0628.4610	Cog wheel
48	R12C.5120	Washer
49	PMD0139.4610	Fixing plate
50	PMD0140.4610	Fastening rag bolt
51	MMCOI.2620	Thimble
52	V4.2X9.5.5101	Screw
53	V2.9X16.5101	Screw
54	PMCAC1.4630	Ring
55	V4X5.5102	Screw
56	V2.9X6.5-A.5101	Screw
57	V3.5X20.5101	Screw
59	V4.8X16.5101	Screw
60	R04E.5120	Washer
62	GOR-L1.5501	Packing
65	CF0193.5320	Wiring
67	V4X8.5105	Screw
68	V4.2X9.5B.5101	Screw
69	BPC.4540	Hole lid
70	D6.5102	Nut
71	D12B.5110	Nut
72	D12.5110	Nut
74	G6X14.5123	Grub screw
75	R12.5120	Washer
76	V6.3X25.5101	Screw
78	GOR-M.5501	Packing
79	CGU8B.5310	Protective covering
80	PMD0885.4610	Flask
81	PMD0886.4610	Flask
82	V10X12A.5102	Screw
83	PMD0165.4610	Ferrule
84	GOR-W.5501	Packing
85	PMCS6.4630	Pin

Code TH2251

Position	Code	Spare part description
1	BMGTHA.45673	Shell
2	BMGTHC.45673	Lid
3	PPD1179.4540	Fastening lid
4	BMMSAR02.45671	Unlocking handle
5	PPD1178.4540	Lock lid
6	CM-B.1630	Key lock
7	PMD0166.4610	Small lever
8	G6X50.5123	Grub screw
9	PPD1184.4540	Box
10	BPCO2.4540	Central box Lid
11	THA6	Control Unit
12	TRA105.1030	Transformer
13	MO-D.2640	Spring
14	MICROI-C.1617	Microswitch
15	MICROI.1617	Microswitch
16	30U450A.0727	Capacitor
17	BMC1.4567	Lower calotte
18	PEDS658.4650	Stator
19	BMCS.45672	Upper calotte
20	PPD1180.4540	Fan
21	PPD1181.4540	Gauge box lid
22	PMD0133R07.4610	Endless screw
23	PMCU3010.4630	Bearing
24	PECR1176.4670	Rotor
25	PPD1182.4540	Housing for microswitch
26	PPD1183.4540	Cap
28	PMCU6.4630	Bearing
33	V6X120.5102	Screw
34	PMD0167.4610	Unlocking pin
35	MO-N.2640	Spring
36	PMCU3.4630	Bearing
37	PMCSE30.4630	Seeger ring
38	PMDRC5.46102	Driven wheel
39	PMD0131A.4610	Shaft
40	PMC128.4630	Cotter
41	PMCS10.4630	Pin
42	PPD0120.4540	Sleeve
43	PMCU10.4630	Bearing
44	GOR-Y.5501	Packing
45	BMFP010A.45673	External flange
46	V5X15-A.5102	Screw
47	PMD0628.4610	Cog wheel
48	R12C.5120	Washer
49	PMD0139.4610	Fixing plate
50	PMD0140.4610	Fastening rag bolt
51	MMCOI.2620	Thimble
52	V4.2X9.5.5101	Screw
53	V2.9X16.5101	Screw
54	PMCAC1.4630	Ring
55	V4X5.5102	Screw
56	V2.9X6.5-A.5101	Screw
57	V3.5X20.5101	Screw
58	EMRO.4870	Label
59	V4.8X16.5101	Screw
60	R04E.5120	Washer
61	V2.9X9.5-A.5101	Screw
62	GOR-L1.5501	Packing
65	CF0193.5320	Wiring
66	CT200.5320	Wiring
67	V4X8.5105	Screw
68	V4.2X9.5B.5101	Screw
69	BPC.4540	Hole lid
70	D6.5102	Nut
71	D12B.5110	Nut
72	D12.5110	Nut
74	G6X14.5123	Grub screw
75	R12.5120	Washer
76	V6.3X25.5101	Screw
77	C3VF.2015	Female connector
78	GOR-M.5501	Packing
79	CGU8B.5310	Protective covering
80	PMD0885.4610	Flask
81	PMD0886.4610	Flask
82	V10X12A.5102	Screw
83	PMD0165.4610	Ferrule
84	GOR-W.5501	Packing
85	PMCS6.4630	Pin

Code TH2261

Position	Code	Spare part description
1	BMGTHA.45673	Shell
2	BMGTHC.45673	Lid
3	PPD1179.4540	Fastening lid
4	BMMSAR02.45671	Unlocking handle
5	PPD1178.4540	Lock lid
6	CM-B.1630	Key lock
7	PMD0166.4610	Small lever
8	G6X50.5123	Grub screw
9	PPD1184.4540	Box
13	MO-D.2640	Spring
14	MICROI-C.1617	Microswitch
15	MICROI.1617	Microswitch
17	BMCI.4567	Lower calotte
18	PEDS652A.4650	Stator
19	BMCS.45672	Upper calotte
20	PPD1180.4540	Fan
21	PPD1181.4540	Gauge box lid
22	PMD0133R07.4610	Endless screw
23	PMCU3010.4630	Bearing
24	PECR1175.4670	Rotor
25	PPD1182.4540	Housing for microswitch
26	PPD1183.4540	Cap
27	M12V.1850	Junction-box
28	PMCU6.4630	Bearing
29	MMCP.2620	Thimble
30	MMCT.2620	Thimble
32	G8X10.5123	Grub screw
33	V6X120.5102	Screw
34	PMD0167.4610	Unlocking pin
35	MO-N.2640	Spring
36	PMCU3.4630	Bearing
37	PMCSE30.4630	Seeger ring
38	PMDRC5.46102	Driven wheel
39	PMD0131A.4610	Shaft
40	PMC128.4630	Cotter
41	PMCS10.4630	Pin
42	PPD0120.4540	Sleeve
43	PMCU10.4630	Bearing
44	GOR-Y.5501	Packing
45	BMFP010A.45673	External flange
46	V5X15-A.5102	Screw
47	PMD0628.4610	Cog wheel
48	R12C.5120	Washer
49	PMD0139.4610	Fixing plate
50	PMD0140.4610	Fastening rag bolt
51	MMCOI.2620	Thimble
52	V4.2X9.5.5101	Screw
53	V2.9X16.5101	Screw
54	PMCAC1.4630	Ring
55	V4X5.5102	Screw
56	V2.9X6.5-A.5101	Screw
57	V3.5X20.5101	Screw
59	V4.8X16.5101	Screw
60	R04E.5120	Washer
62	GOR-L1.5501	Packing
65	CF0193.5320	Wiring
67	V4X8.5105	Screw
68	V4.2X9.5B.5101	Screw
69	BPC.4540	Hole lid
70	D6.5102	Nut
71	D12B.5110	Nut
72	D12.5110	Nut
74	G6X14.5123	Grub screw
75	R12.5120	Washer
76	V6.3X25.5101	Screw
78	GOR-M.5501	Packing
79	CGU8B.5310	Protective covering
80	PMD0885.4610	Flask
81	PMD0886.4610	Flask
82	V10X12A.5102	Screw
83	PMD0165.4610	Ferrule
84	GOR-W.5501	Packing
85	PMCS6.4630	Pin